


TRITORC

HANDTORQUE TORQUE MULTIPLIERS

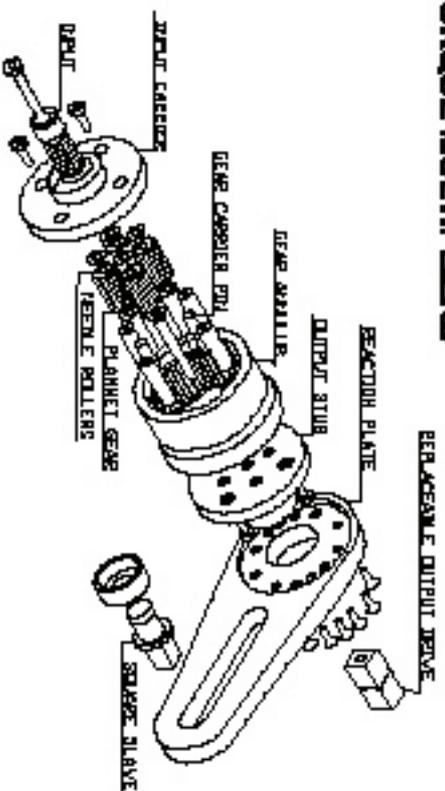

TRITORC, INC.
PO BOX No. 5371
PASADENA, TEXAS
77508 USA

INSTRUCTION MANUAL FOR TRITORC TORQUE MULTIPLIERS

HANDLING INSTRUCTIONS

TRITORC TORQUE MULTIPLIER are Compact, Alloy Steel, Epicyclic Gear Units which have a velocity ratio of 5:20:1 and an actual power multiplication of 5:1 per stage of gearing.

TRITORC TORQUE MULTIPLIERS can be interposed between a Standard Torque Wrench (Ratchet Type is preferred) and Socket to multiply by 5, 25 or 125 times, the effort that a worker can exert. They are usually used for the controlled tightening of $\frac{3}{4}$ " Dia Bolts and upwards or for providing very high torques economically.

1. WHAT TORQUE DO YOU WISH TO APPLY?

Try to choose a gear unit which has capacity to spare, in case the Torque specification is increased.

2. WILL THE GEAR UNIT HAVE ROOM TO GO ON THE BOLT?

Dimensions of gear Units are given in the Catalogue. A misalignment of $\frac{1}{4}$ " per foot is permissible out where the Bolt is very close to an obstruction or head room is restricted, a Torque link type of adaptor can be used to take the Gear Unit clear.

3. WILL YOU NEED AN EXTENSION BETWEEN THE GEAR UNIT AND THE SOCKET?

Where it is necessary to use an extension drive shaft between the output square of the gear Unit and the Socket, you must provide a balance reaction. A Double Ended reaction plate with both sides taking load serves this purpose. Otherwise the gear Unit either forces itself sideways off the nut or the gears are damaged by the leverage exerted by the extension. Reaction also tend to twist under these conditions.

4. WHAT CAN YOU PLACE THE TORQUE REACTION FORCE AGAINST?

Reaction forces decrease the further your reaction point is away from the gear Unit. Reaction forces work in the opposite direction to nut rotation. They may be applied through the reaction plate resting against a solid projection, or by a Socket on the slave square fitting over the head of an adjacent bolt.

REACTION FORCE DECREASES FURTHER THE REACTION UNIT.

**i.e for 200 Kgm -200kg at 1 mt. radius or 100 kg at mt. radius
400 kg at 0.5 mt radius**

5. WILL YOU HAVE ROOM TO USE A TORQUE WRENCH?

You may a need a 25:1 to allow use of a Shorter Torque Wrench.


6. DO YOU NEED A SPECIAL REACTION PLATE?

It is also advisable to have Special Reaction Plate to handle Torque in excess of 275 kgm when the reaction point of contact is less than 100mm from the centre of the gear Unit Pieces may be welded into the reaction plate to overcome this problem.

TRATORC

1. TO THIN A MAT


- a. Attach the Central Socket with some Axonaxi Pin. Also add Pin 7 (Ball and Square) (Pin corresponding to axial Drive Figure of Handicap).
- b. Use rotation to a direction opposite to the applied stress.
- c. To prevent sudden shifts on Chair 4, the number marked on possible front sliding supports.
- d. For usual height (Trapezium - TRATORC - Trapezium - Trapezium) with level in coded (medium).

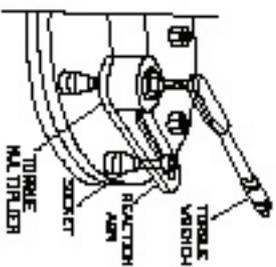

2. The Output Figure, how a Study - Drive Figure

Designed by provided flow gear.

Note: In the system requires, use the torque key to remove stress in liquid stress, system requires and effort in just using and make greater than to give freedom of rotation, if required.

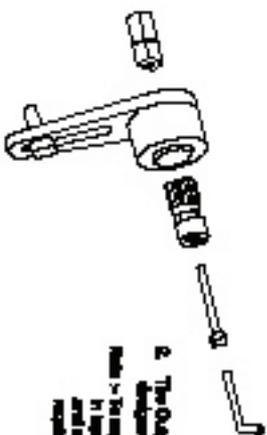

3. Use of a Long Cylinder. Extension of the way to use

provided output torque stress, not usual 700 bars, pushing and rotation stress and below of the extension end of the rotation bar.

